

Bennett Pump Company, Spring Lake, Michigan—Adjustable Nozzle Hook Instructions



For standard interchangeable nozzles, use bottom mounting holes in nozzle hook bracket as shown above. Examples of standard nozzles are OPW 11A, Husky X.



Use top mounting holes in nozzle hook bracket as shown above for the following nozzles: OPW 7H & 7BH; Richards Mark 7 & 7B; Husky VIII, VIIS, & 1-HS; Emco A6000 series; Catlow MAX-1

Addendum to 103848, 104652, and 105993 Technical Publications
Part number 106467 Instruction Sheet for Adjustable Nozzle Hook (Rev A 9/02)

Bennett Pump Company, Spring Lake, Michigan—Adjustable Nozzle Hook Instructions



For standard interchangeable nozzles, use bottom mounting holes in nozzle hook bracket as shown above. Examples of standard nozzles are OPW 11A, Husky X.



Use top mounting holes in nozzle hook bracket as shown above for the following nozzles: OPW 7H & 7BH; Richards Mark 7 & 7B; Husky VIII, VIIS, & 1-HS; Emco A6000 series; Catlow MAX-1

Addendum to 103848, 104652, and 105993 Technical Publications
Part number 106467 Instruction Sheet for Adjustable Nozzle Hook (Rev A 9/02)