

PACIFIC SERIES DISPENSER QUICK OPERATORS GUIDE

This quick operator's guide includes instructions on how to power up the dispenser, how to use the battery kill function, how to dispense fuel, and how to run a sale. Please refer to your technical manuals located on the USB provided for detailed information.

POWERING UP THE DISPENSER



WARNING: To prevent electric shock, make sure the current is off at the circuit breaker(s) and the breaker is locked out before doing any repairs or maintenance to the dispenser.



DANGER: INCOMING AC POWER AT TS1 WILL REMAIN ACTIVE IF THE MAIN CIRCUIT BREAKER(S) ARE NOT TURNED OFF.

A Power Switch is used to apply or to remove power from the dispenser. When the switch is in the off position, main power is removed from the electronic circuit board. **Note:** When the power switch is turned off, the displays in the dispenser remain illuminated for 30 seconds with power from the 12-volt battery. To turn off the battery power press the battery kill button.

BATTERY KILL BUTTON

A push button switch is used to kill the battery backup if desired. This switch can be used to override the 30-second battery if primary power is lost at the dispenser, or if incoming power drops below 74 volts AC. This switch stays in the up position by a spring.

To "kill" power to the dispenser press down quickly and release. Once the switch is closed, and the display goes blank, release the switch. **Note:** After powering the dispenser off wait, no less than five seconds before pressing the battery disconnect switch.

HOW TO DISPENSE FUEL

The pump handles are located on the front of the dispenser and are used to dispense fuel. If the dispenser stops during the delivery of fuel, check the display for an error code. For a list of error codes, refer to the *919 Electronics Technical and Programming Manual*. **Note:** Payment authorization may be required prior to dispensing fuel. If using the Local Preset option, the money or volume button must be pressed before the lever is turned on.

Follow the steps below to dispense fuel:

1. Place nozzle into the vehicle or approved container.
2. Lift the pump handle to the **ON** position to turn on dispenser. **Note:** If the dispenser is set for Auto-On then the handle will automatically lift up.
3. If the dispenser is a multi-product dispenser, select the desired grade by pressing the grade select button.
4. Wait for the displays to go to all 8's and then all 0's.
5. Squeeze the nozzle trigger to dispense fuel.
6. Release the nozzle trigger when the desired amount of fuel has been dispensed.
7. Lower the pump handle to the **OFF** position. If the nozzle boot is set for auto-on then as you replace the nozzle it will lower the lever automatically.
8. Replace the nozzle to the nozzle boot.

HOW TO RUN A SALE

The following instructions are for general payment terminal operation. **Note:** The Local Preset option and the SSP option are mutually exclusive. A dispenser may have either option, but cannot have both.

SIMPLY SECURE PAYMENT (SSP) OPTION

The **SSP (Simply Secure Payment)** option allows the customer to pay for fuel with a credit card or debit card and receive a receipt. The dispenser is connected to a financial network through a third-party POS system to allow approval of the cards at the time they are inserted into the dispenser.

1. When prompted, insert your card with the magnetic stripe facing down and to the right.
2. Push the card all the way in until it stops and remove. You will be prompted to remove the card.
3. Follow the instructions on the payment terminal or on the large display.

NFC PAYMENT OPTION

The **NFC (Near Field Communication)** option allows the customer to pay for fuel using a contactless enabled card and/or mobile device. **Note:** The NFC option is not compatible with the Local Preset option.

1. When prompted, tap your contactless enabled card and/or mobile device near the contactless symbol. The four light indicators will illuminate indicating a transaction process.
2. Follow the instructions on the payment terminal or on the large display.

LOCAL PRESET OPTION

The **Local Preset** option allows the customer or operator the ability to select volume or currency and preset the amount of fuel to be purchased. When the preselected amount (volume or currency) is reached, the dispenser will automatically stop. A fill up feature is also present.

1. Press the **Money** button to change to Money preset or the Volume button to change to **Volume** preset.
2. Enter an amount using the 0-9 buttons on the preset keypad. If an error is made, press the **Cancel** button and start over.

Note: If fueling does not begin within 60-seconds of starting the sale then the preset will reset to Full Tank.